

INSTALLATION SHEET FOR RL STYLE RELIEF VALVE

KEEP WITH PRODUCT UNTIL INSTALLED

ADDITIONAL SHEETS MAY BE PRINTED OUT FROM OUR WEBSITE WWW.BRAND-HYD.COM UNDER PRODUCT CATALOG SECTION

How do I adjust the relief setting?

First, remove the chrome hex plug with a 7/8" combination wrench, etc and set aside. This gives you access to the relief set screw (5/16" hex). Turning the set screw clockwise will increase the pressure.

- RL models: 1 turn is ~500psi[34.47bar]
- RLC models: 1 turn is ~ 800psi[55.16bar]

Can I paint my valve? – Painting valves is okay as long as the all ports are properly plugged.

Pipe thread sealant – Warranty is void when Teflon tape is used to seal pipe threads. This is because Teflon tape is a friction reducing agent which allows customers to over-torque fittings. We recommend using a sealant that does not include friction reducing agents i.e. Lead Plate.

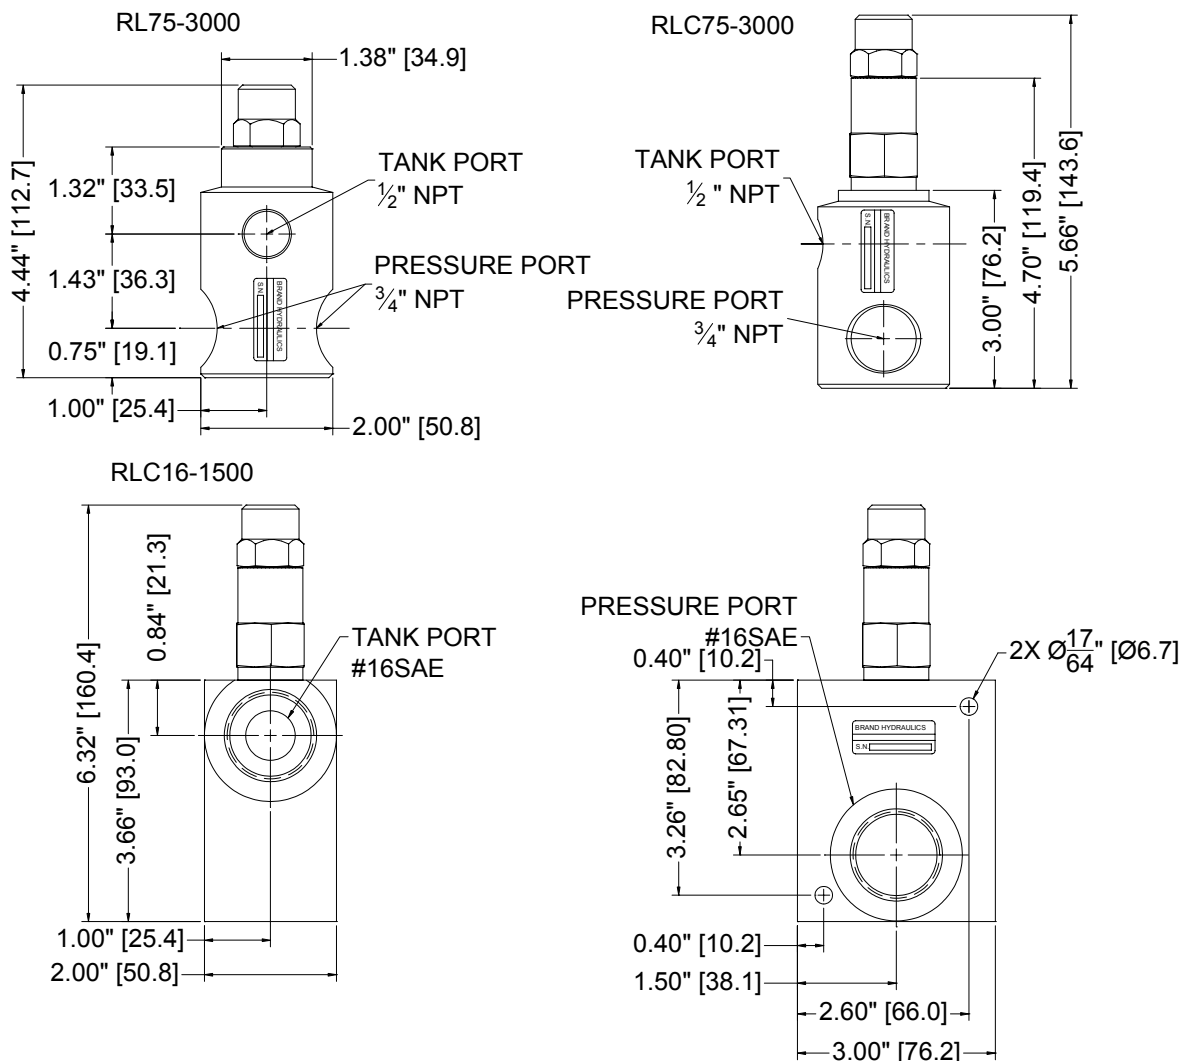


Figure 1: Dimensional Data for RL & RLC valves in inches & [millimeters].